


## TAPAS LATERALES ADAPTABLES A - INFILL PANELS ADAPTABLE TO - SEITENVERKLEIDUNGEN FÜR BMW R NINE T SCRAMBLER/ RACER/ PURE/ URBAN G/ URBAN S



**Ref.: 9590**

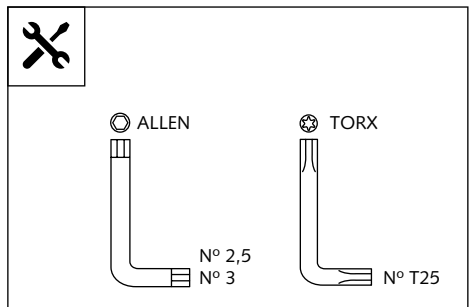

1 persona  
1 person





40 min

Fácil - Easy  
Media-Intermediate  
Difícil-Difficult

ID	PIEZA / PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF.
1		Tapa lateral derecha (R)	Right side cover (R)	1	SOPEMB--14-9590
2		Tapa lateral izquierda (L)	Left side cover (L)	1	SOPEMB--14-9590
3		Soporte metálico derecho (R)	Right metal suport (R)	1	SOPOR-2P-7-9590
4		Soporte metálico izquierdo (L)	Left metal suport (L)	1	SOPOR-2P-7-9590
5		Tornillo Allen Inox M4x10 Ø7 ISO7380	M4x10 Ø7 ISO7380 Allen Inox screw	6	TORNI-I7380_753
6		Arandela de goma Ø4,5 x Ø11 x 2mm	Ø4,5 x Ø11 x 2mm Rubber washer	6	ARAND-EPDM__722
7		Arandela de nylon M4x0.5mm	M4x0.5mm nylon washer	6	ARNV00000000311
8		Casquillo Ø14 x Ø8 x 6mm	Ø14 x Ø8 x 6mm arrowhead	4	CASQUI____208
9		Tornillo Allen Inox M5x20 Ø11 ISO7380	M5x20 Ø11 ISO7380 Allen Inox screw	4	TORNI-I7380_730
10		Kit adhesivos	Stickers set	1	ADHESI____248

TAPAS LATERALES ADAPTABLES A - INFILL PANELS ADAPTABLE TO - SEITENVERKLEIDUNGEN FÜR  
**BMW R NINE T**  
**SCRAMBLER/ RACER/ PURE/ URBAN G/ URBAN S**

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

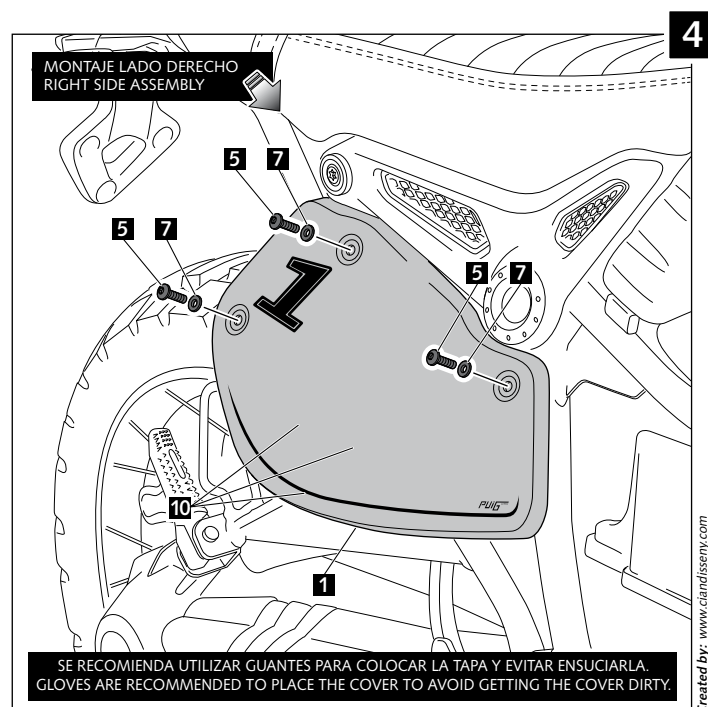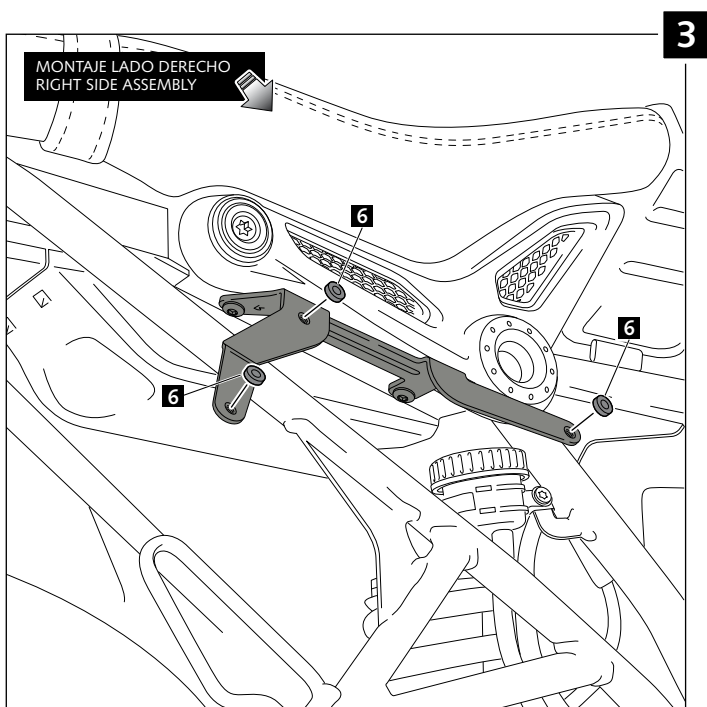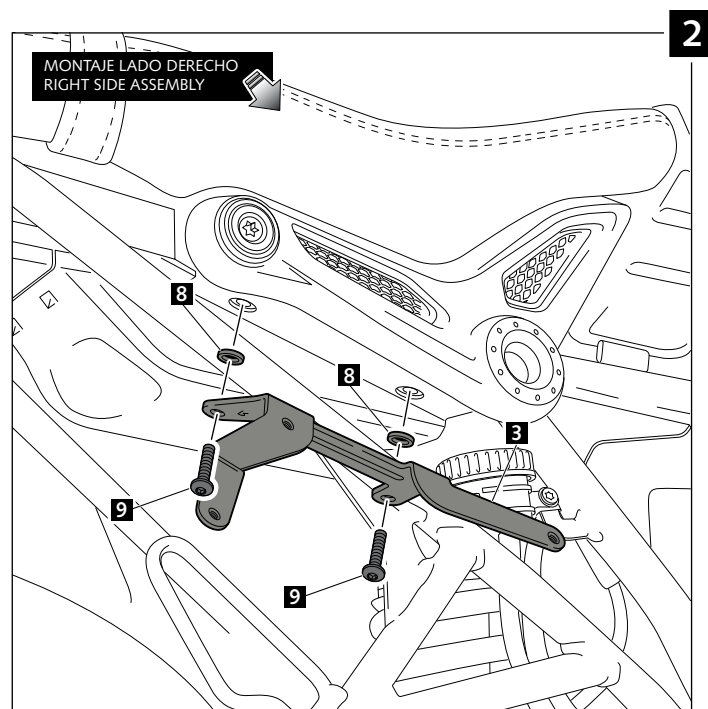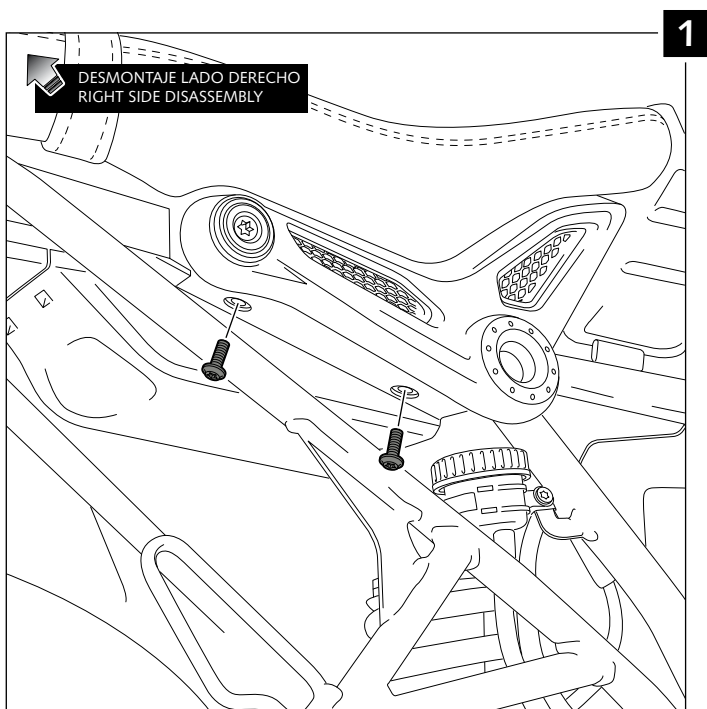

TAPAS LATERALES ADAPTABLES A - INFILL PANELS ADAPTABLE TO - SEITENVERKLEIDUNGEN FÜR  
**BMW R NINE T  
 SCRAMBLER/ RACER/ PURE/ URBAN G/ URBAN S**

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

