

HD SPORSTER RH1250 S' 22-

M O U N T I N G I N S T R U C T I O N S

REF 21325

**SEMIFAIRING FURY SPORT MODEL
BLACK**

REF 21587

**SEMIFAIRING FURY SPORT MODEL
MATT BLACK**



ALLEN
Nº 3

TORX
T45


ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Semicarenado	Semifairing	1	10947N/JM3
2		Cúpula sport	Sport screen	1	10948W/H/N/FM3
3		Soporte metálico derecho (R)	Right metal support (R)	1	SOPOR2P4-R21325
4		Soporte metálico izquierdo (L)	Left metal support (L)	1	SOPOR2P4-L21325
5		Casquillo Ø13xØ8,5 x15	Ø13xØ8,5 x15 Arrowhead	4	CASQUI-M---614
6		Tornillo M8x45 DIN912 (TX45)	M8x45 DIN912 (TX45) screw	4	TORNI-D912--906
7		Silentblock M5	M5 silentblock	2	SILENTBTM5-046/1
8		Arandela de goma Ø4,5 x Ø11 x 2mm	Ø4,5 x Ø11 x 2mm Rubber washer	3	ARAND-EPDM--722
9		Tuerca autoblocante M5 DIN982	M5 DIN982 Lock nut	1	TUERCA-D982-746
10		Silentblock Ø12xØ6x9	Ø12xØ6x9 Silentblock	2	AROPASACABLES-3
11		Casquillo con valona Ø12xØ6,8x7,3	Ø12xØ6,8x7,3 Bush with flange	2	CASQUI-1A---750
12		Tornillo Allen M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 Allen screw	3	TORNI-I7380-493
13		Tornillo Allen M5x20 Ø11 ISO 7380	M5x20 Ø11 ISO 7380 Allen screw	2	TORNIAI7380-387
14		Arandela de nylon M5	M5 nylon washer	4	ARNV00000000245
15		Tapón tornillo M5 ISO 7380	M5 ISO 7380 screw cap	5	TAPON-----85

HD SPORSTER RH1250 S' 22-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

DISASSEMBLY
DESMONTAJE

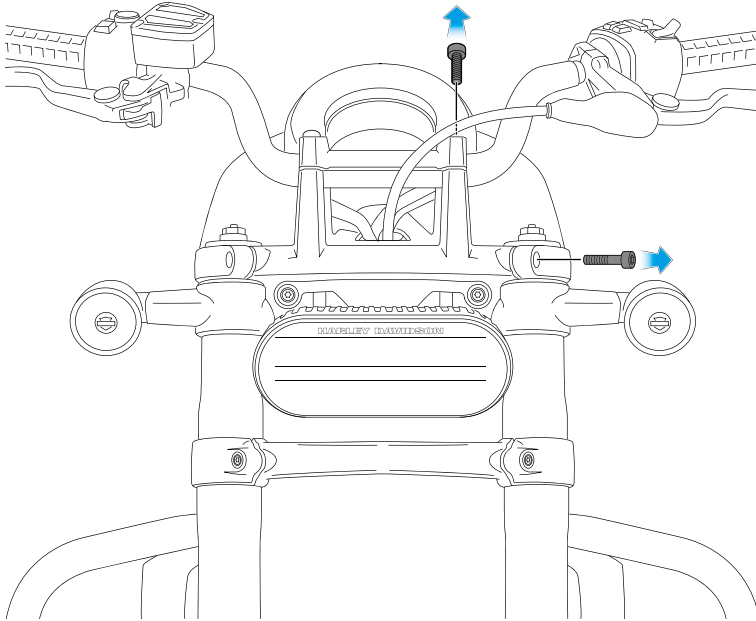


2

ASSEMBLY
MONTAJE

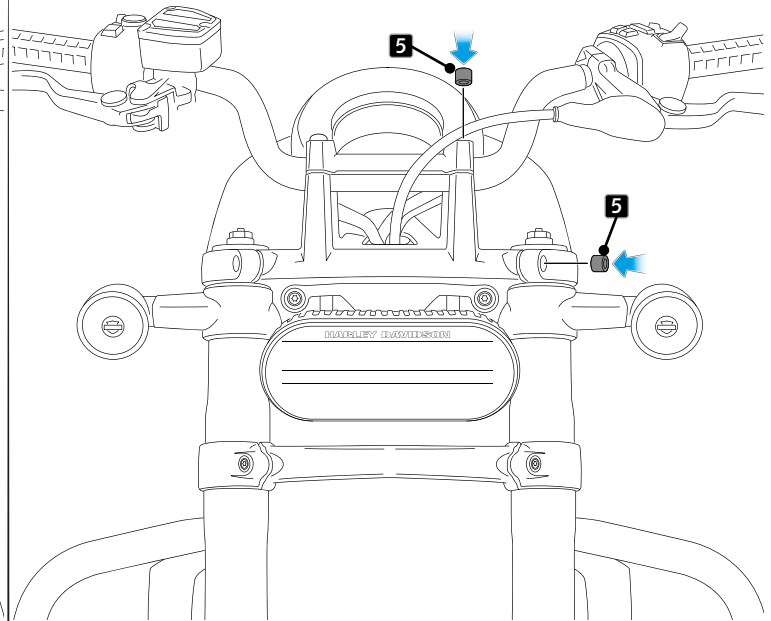

3

ASSEMBLY
MONTAJE

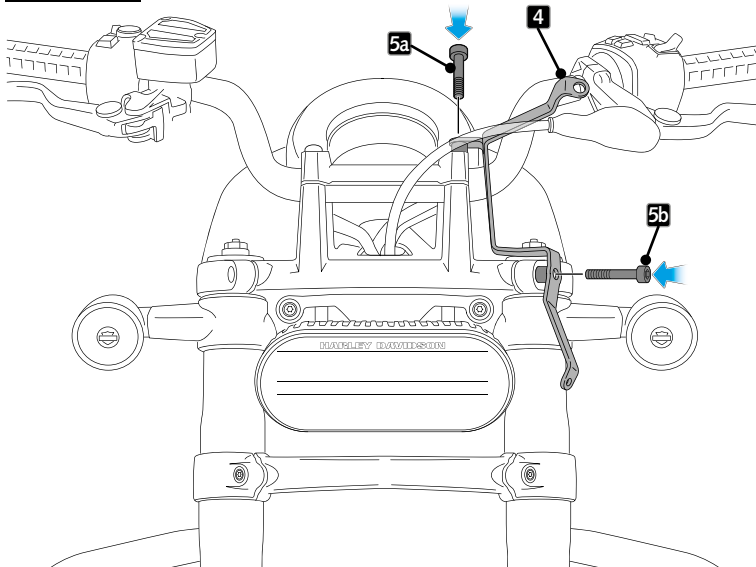


5a Par de apriete - 20 Nm
Tightening torque - 20Nm

5b Par de apriete - 28 Nm
Tightening torque - 28Nm

4

DISASSEMBLY
DESMONTAJE

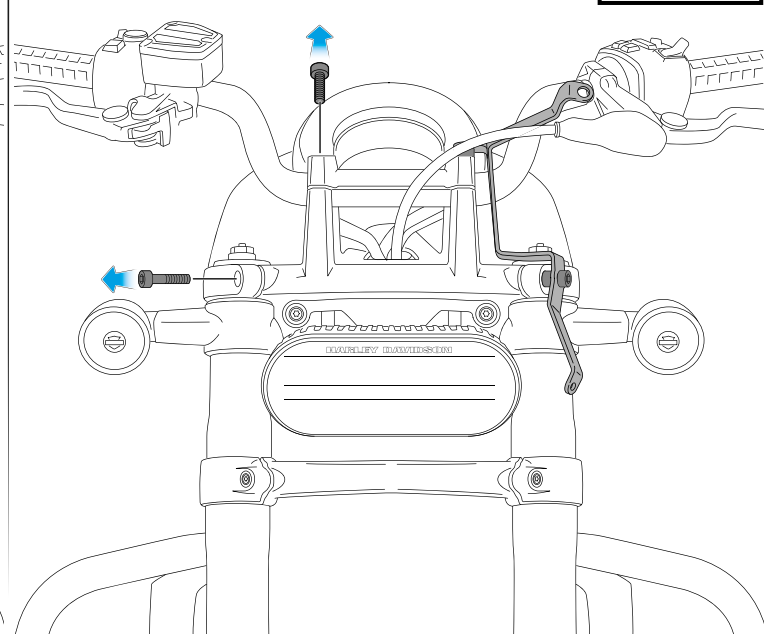


HD SPORSTER RH1250 S' 22-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


5

ASSEMBLY
MONTAJE

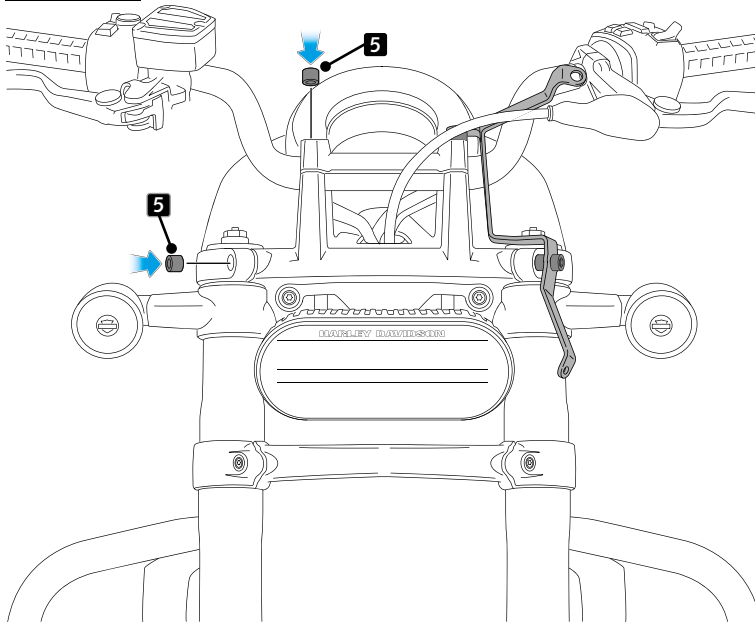


6

ASSEMBLY
MONTAJE

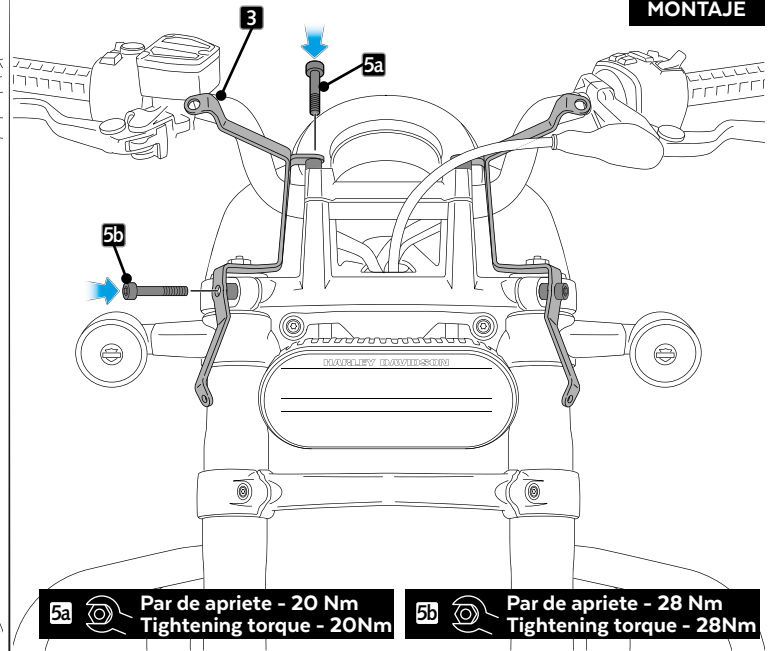


7

ASSEMBLY
MONTAJE

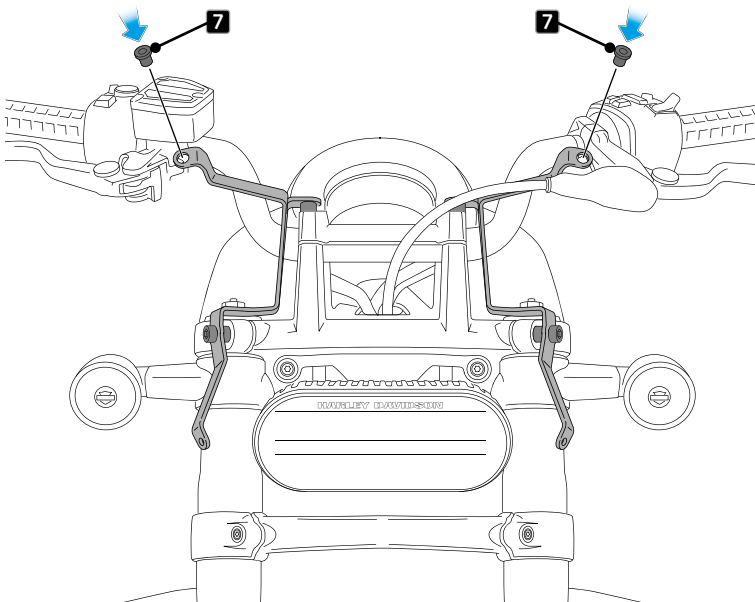

8

ASSEMBLY
MONTAJE

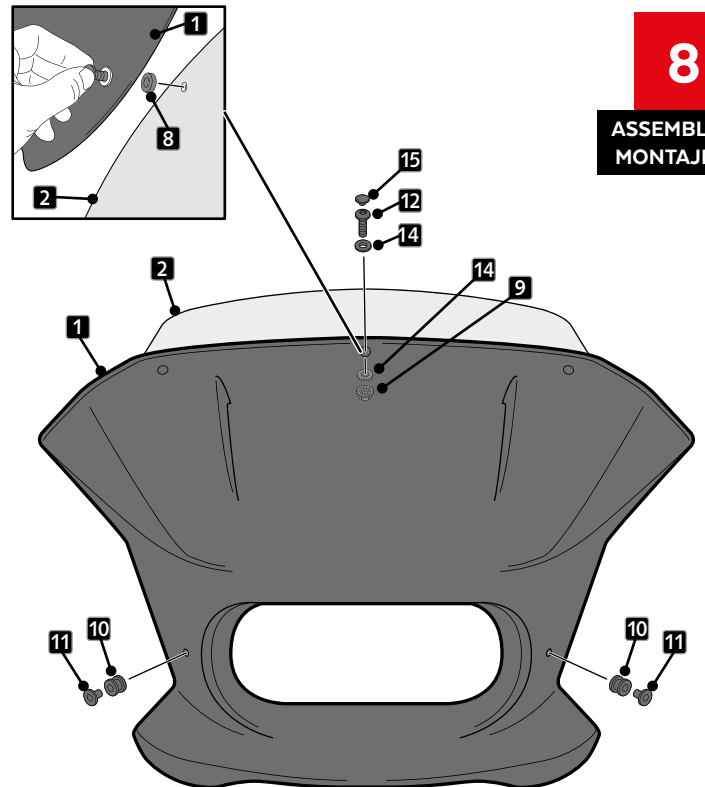


HD SPORSTER RH1250 S' 22-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

9

ASSEMBLY
MONTAJE

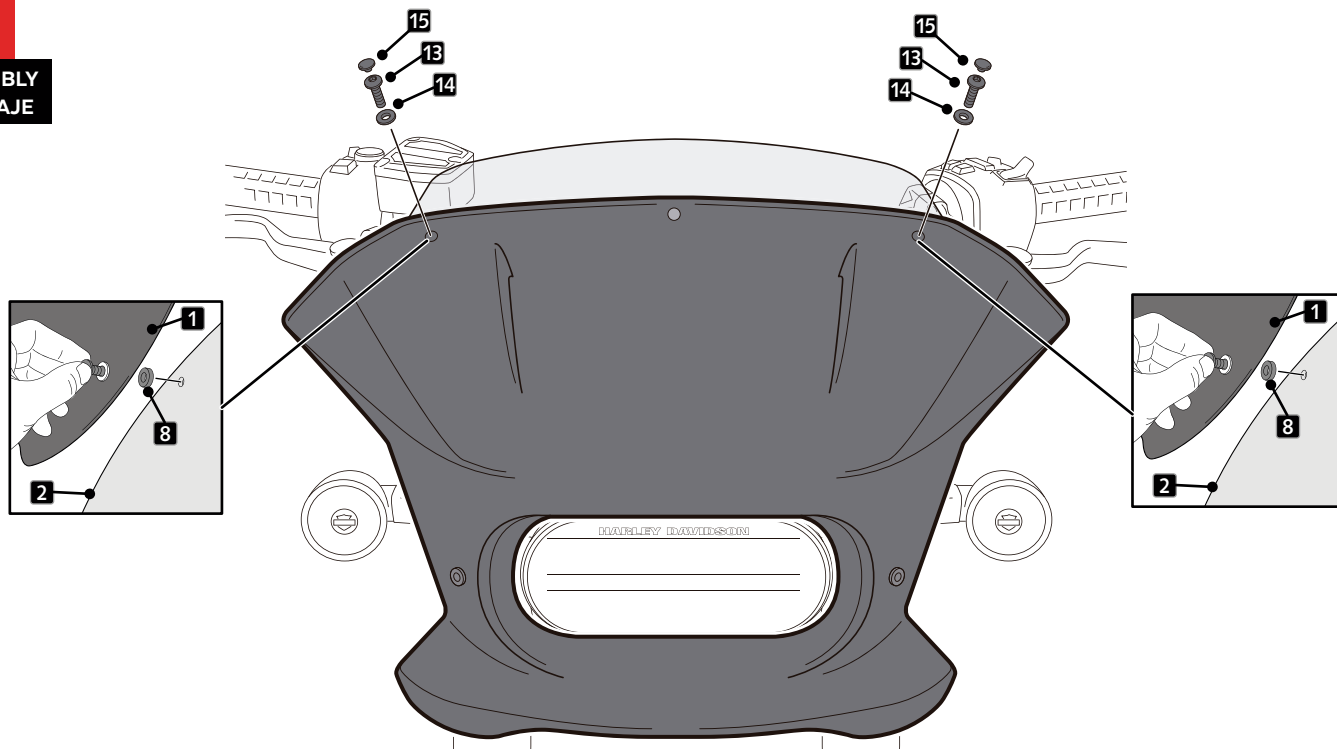

10

ASSEMBLY
MONTAJE

