

HONDA CB500F '16-

M O U N T I N G I N S T R U C T I O N S


REF 21412

WINDSHIELD NEW GENERATION SPORT



ALLEN
Nº 3
Nº 5




| ID | PIEZA/PART | DESCRIPCIÓN | DESCRIPTION | QTY | REF |
|----|-------------------------------------------------------------------------------------|-----------------------------------|--------------------------------|-----|-----------------|
| 1 |  | Cúpula | Screen | 1 | 21412F/H/N/WM3 |
| 2 |  | Soporte metálico derecho (R) | Right metal support (R) | 1 | SOPOR2P1-R-3657 |
| 3 |  | Soporte metálico izquierdo (L) | Left metal support (L) | 1 | SOPOR2P1-L-3657 |
| 4 |  | Silentblock M5 | M5 silentblock | 4 | SILENBTM5-046/1 |
| 5 |  | Tornillo Allen M5x16 Ø11 ISO 7380 | M5x16 Ø11 ISO 7380 Allen screw | 4 | TORNI-I7380-493 |
| 6 |  | Arandela de nylon M5x1 | M5x1 Nylon washer | 4 | ARNV00000000245 |
| 7 |  | Tapón tornillo M5 ISO 7380 | M5 ISO 7380 Screw cap | 4 | TAPON-----85 |

HONDA CB500F '16-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

**DISASSEMBLY
DESMONTAJE**

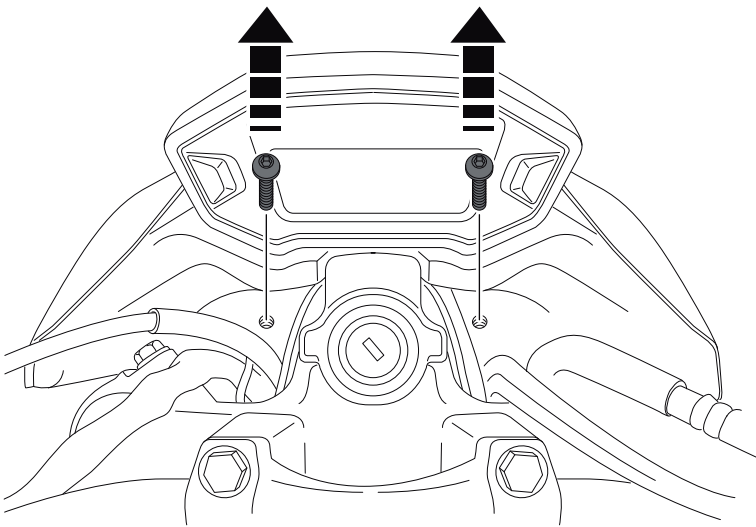

2


**ASSEMBLY
MONTAJE**

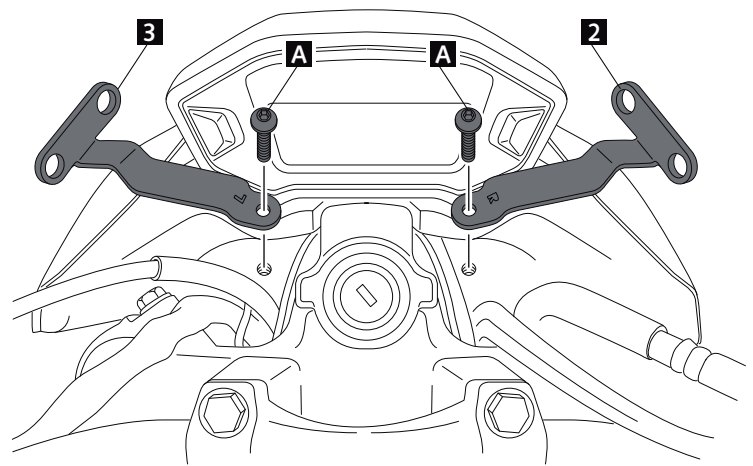

A Tornillos originales
Original screws

3

**ASSEMBLY
MONTAJE**

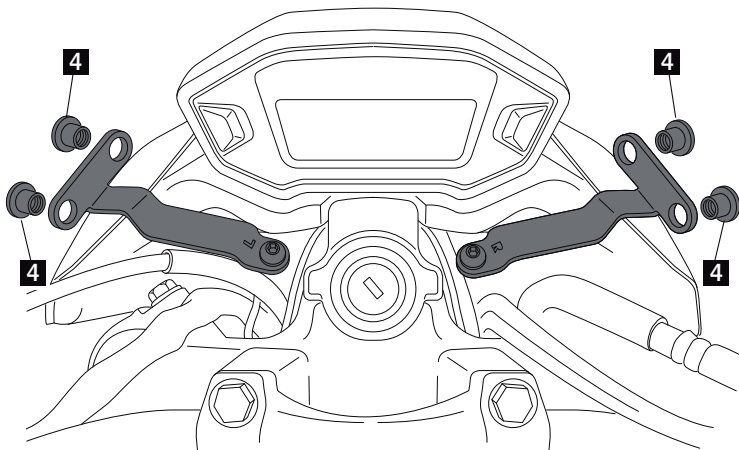

4

**ASSEMBLY
MONTAJE**

