

Thank you for purchasing a National Cycle product. Read these instructions carefully and thoroughly before beginning work. Dealers, if installing this windscreen for a customer, please give them this manual. It contains information needed to properly maintain and use this product.



**Attention:**

Special notes and cautionary measures which can prevent damage to the accessory or motorcycle.




**Note:**

Tips for facilitation of operation, control and adjustment, as well as maintenance work.

**CONTENTS OF KIT**

| Item | Description         | Part No. | Qty. | Notes and Tools                    |
|------|---------------------|----------|------|------------------------------------|
| 1    | VStream® Windscreen |          | 1    | All Stock Hardware Will Be Re-used |

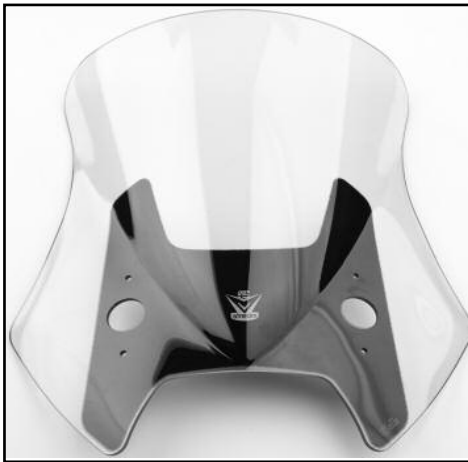

**TOOLS**

- 5mm Hex Key
- 8mm Socket Wrench
- Tape (Optional)



Figure 1

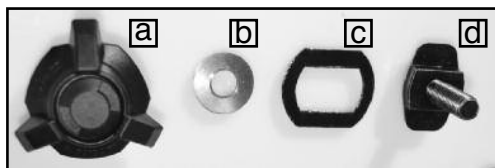


Figure 2

**PREPARATION**

1. Place motorcycle securely on its side stand.
2. Remove the 2, adjustment knobs (a) from front of stock windscreen.
3. Removal of knobs will release parts (b, c, and d). Repeat on opposite side.

**Figures 1 and 2**



All stock hardware will be reused.



Figure 3



Figure 4

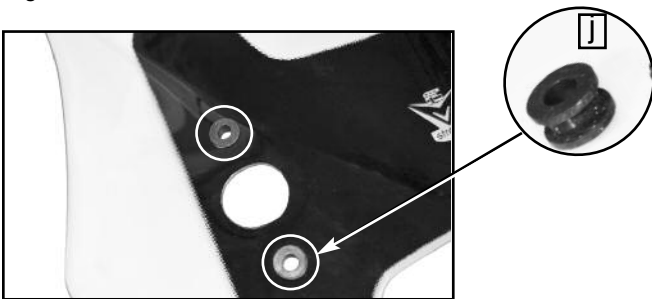


Figure 5

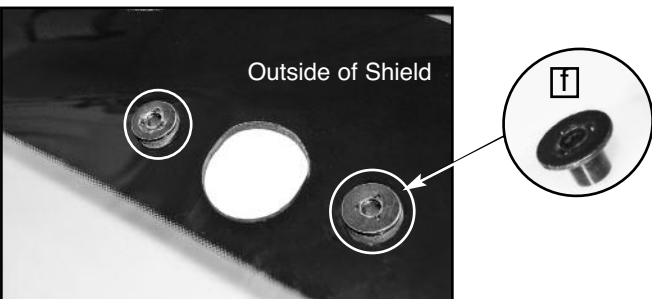


Figure 6

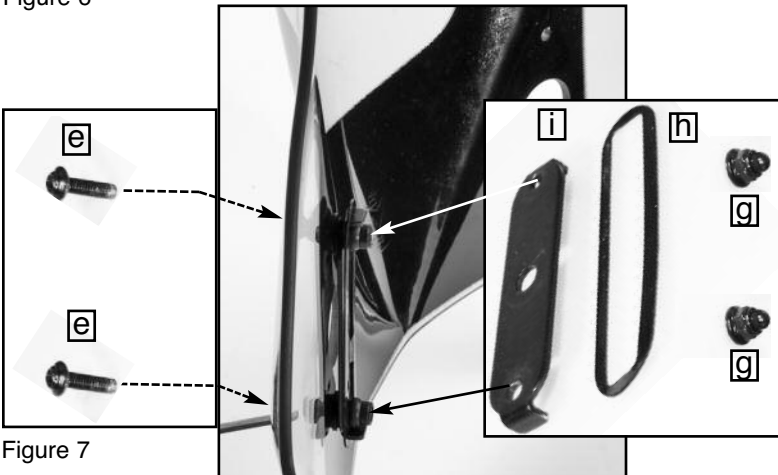


Figure 7

## PREPARATION

4. Remove the 4 hex screws (e), from front of stock windscreen. Removal of screws will release parts (f, g, h, and i). **(5mm Hex Key) Figures 3 and 4**

 **All stock hardware will be reused.**

## INSTALLATION

**Installation of stock parts to VStream Windshield.**

1. Remove the 4, stock bushings (j) from stock screen. Install bushings (j), to VStream Windshield. **Figure 5.**

2. From the outside of the VStream Windshield, insert 1, top hat bushing (f) into each hole. **Figure 6**

3. Install Stock Parts (e, i, h, and g) to the VStream Windshield. **(5mm Hex Key and 8mm Socket Wrench) Figure 7**

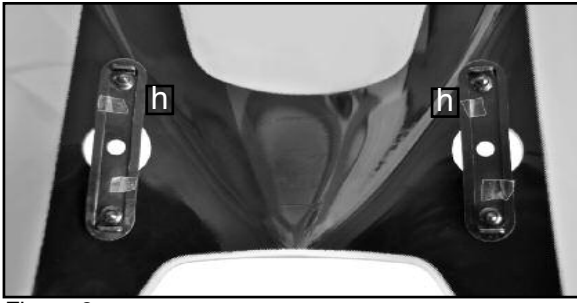



Figure 8

 It will be helpful to hold stock part (h) in place with a small piece of Tape while completing installation. (Masking Tape) Figure 8

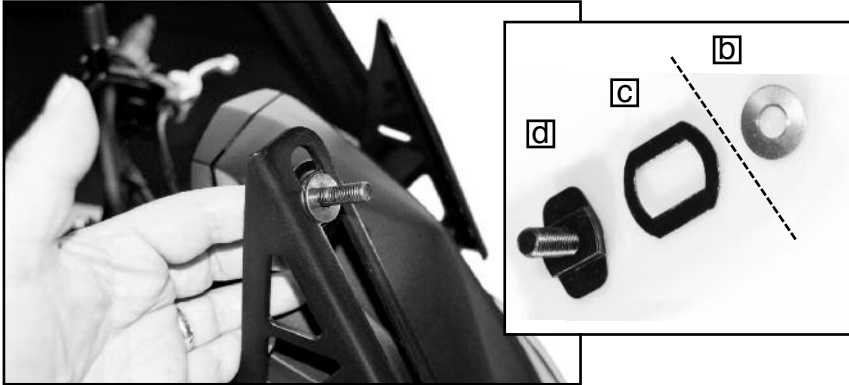


Figure 9

#### Installation of VStream Windscreen

4. Use the knobs (a) to install the VStream Windscreen to the motorcycle's windshield bracket. Assemble stock parts (d, c) from the inside of bracket and washer (b) from the outside. **Figure 9 and 10**

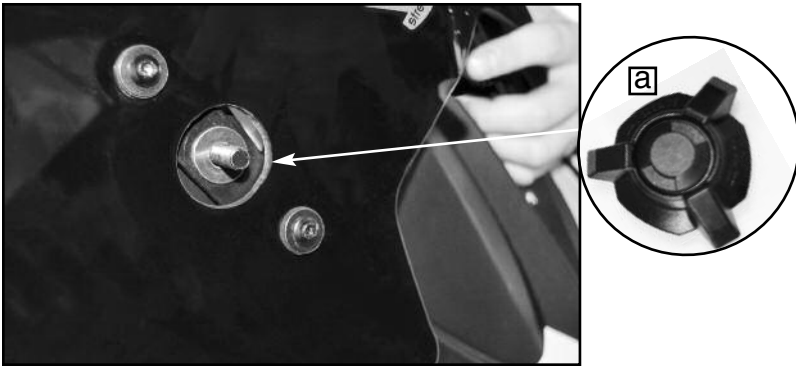


Figure 10

- 5. Adjust the height of the VStream Windshield.
- 6. Tighten knobs (a) firmly. **Figure 10**



#### Finished Installation

**Enjoy your new VStream® Windshield**



**CLEANING AND MAINTENANCE** To clean the screen, wash with a clean soft cloth, plenty of warm water and if necessary, a non-abrasive soap such as dishwashing liquid. Flannel or soft chamois make good cleaning cloths. **Paint, glue residue or grease removal:** Moisten cotton with naphtha or turpentine followed by a wash as above. National Cycle **Shield Wash™** (N1401-01) makes a good daily cleaner and comes with a handy travel size bottle. Shield Wash is safe for all windshields and helmet visors.

Do not clean polycarbonate in hot sun or high temperatures. Do not clean the screen with glass cleaners.

Do not allow brake fluid, alcohol, or strong solvents to contact the screen.

**RAIN REPELLENT** Do not use rain protective products made for glass. We recommend National Cycle's **RainZip®** (N1410-01) to keep your windscreen clear in rainy weather.

## **WARNING**

Fahren Sie Ihr Motorrad niemals mit losen Zubehörteilen. Überprüfen Sie die Halterungen regelmäßig auf festen Sitz.

Die heutigen Motorräder sind mit einer ausreichenden Rahmensteifigkeit gebaut, um den moderaten Belastungen standzuhalten, die durch die absehbare Hinzufügung eines oder mehrerer Zubehörteile auf sie ausgeübt werden. Wenn ein oder mehrere Zubehörteile die Stabilität Ihres Motorrads beeinträchtigen, entfernen Sie sofort das / die Zubehörteil (e). Nehmen Sie kein Motorrad in Betrieb, das unsichere Fahreigenschaften aufweist.

Lassen Sie das Problem von erfahrenem Servicepersonal beheben, bevor Sie mit installiertem Zubehör fahren. Bei weiteren Fragen zu Handhabungsproblemen im Zusammenhang mit einem oder mehreren Zubehörteilen wenden Sie sich bitte an Ihren Händler, Motorradhersteller oder Zubehörhersteller.

Sonnenlicht, das von der inneren Krümmung der Windschutzscheibe reflektiert wird, kann zu bestimmten Tageszeiten zu einem extremen Wärmestau auf den Instrumenten des Motorrads führen und diese möglicherweise sogar zum Schmelzen bringen. Gehen Sie beim Parken vorsichtig vor, um dies zu vermeiden. Stellen Sie Ihr Motorrad in Richtung Sonne ab oder platzieren Sie einen undurchsichtigen Gegenstand über diesem Bereich.

*VStream® windshield patent no. 7,387,328*

**National Cycle, Inc.** PO Box 158 Maywood, IL 60153-0158 USA

708-343-0400 / Fax: 708-343-0625 / [www.nationalcycle.com](http://www.nationalcycle.com) / e-mail: [info@nationalcycle.com](mailto:info@nationalcycle.com)